




Reliability & Satisfaction

PRV & PRCV PORT CONNECTIONS

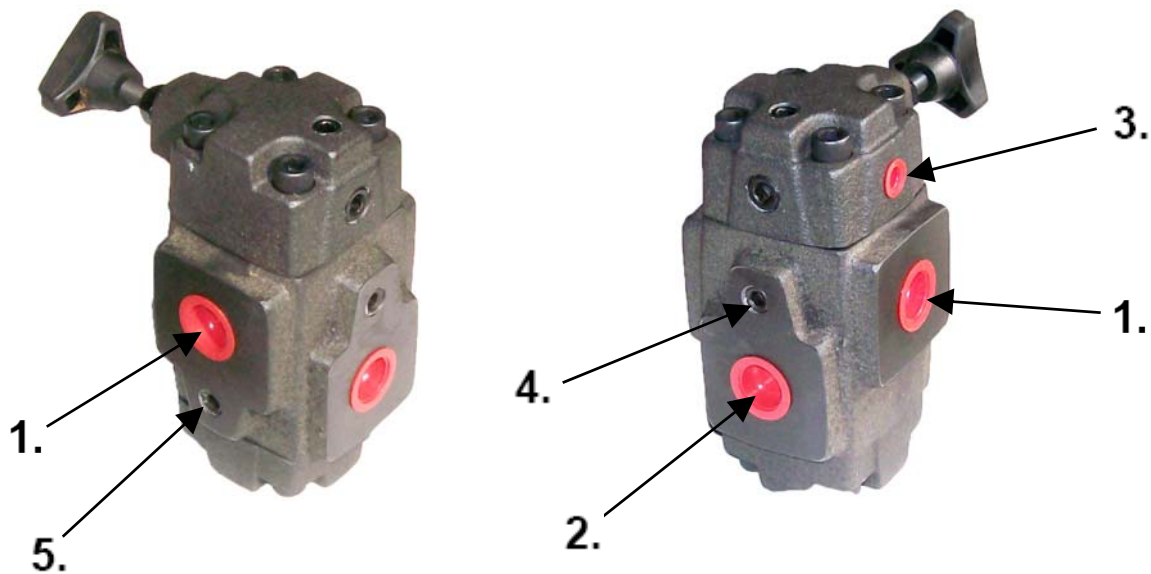

1. Inlet Pressure Port: There are two inlet ports. They are located on either side of the pressure reducing adjustment knob. Whichever one is not used must be plugged.

2. Reduced Pressure Outlet Port: There is one outlet port located opposite the pressure reducing adjustment knob.

3. Drain Port: The drain port is located above the inlet pressure port just to the left of the pressure reducing adjustment knob.

4. Inlet Pressure Gauge Port: The inlet gauge port is located just above the reduced pressure port opposite the pressure reducing adjustment knob.

5. Reduced Pressure Gauge Port: The reduced outlet gauge port is located just below the inlet pressure port on the right hand side of the pressure reducing adjustment knob.